

Hohem iSteady M6 Cheat Sheet		
Buttons		
Button	Press	Function
Joystick		Gimbal manual movement
M	1x	Gimbal Mode wechseln
M	3x	360° nach Oben Drehung
M	5x	Auto Calibration (Gimbal Must Be On Tripod)
Trigger	1x	Sport Mode
Trigger	2x	ReCenter Gimbal
Trigger	3x	180° Drehung Smartphone
Trigger	4x	Ultra Wide Shot Mode (no Arm visible)
Focus Button	2x	Switch Focus / Roll Control
Focus Wheel		Focus or Roll Control
Focus Button	long	Fill Light On/Off
Focus Button	1x	when Light on change Brightness or Temperature
Focus Button	3x	when Light on change RGB or CCT Mode
A	long	Set actual Position as Point A (Beep when done)
B	long	Set actual Position as Point B (Beep when done)
A	2x	Gimbal moves from actual Position to Point A
B	2x	Gimbal moves from actual Position to Point B

Hohem iSteady M6 Cheat Sheet		
Gestures		
ideally 0.5m to 1.5m away from phone/gimbal		
Gestures	Function	
	Tracking ON	
	Tracking OFF	
	Start repositioning (green LED blinking) Move to wanted position and Gesture again Stop repositioning (green LED on)	
PF		Pan Follow (Tilt + Roll locked)
PTF		Pan & Tilt Follow (Roll locked)
L		All locked
POW		All Follow
Gimbal Modes		